

VetteCargoNets™ C5 Floor Net (Part # C5FL01)

Photo A: (C5 Floor Net Attachment Locations (four))

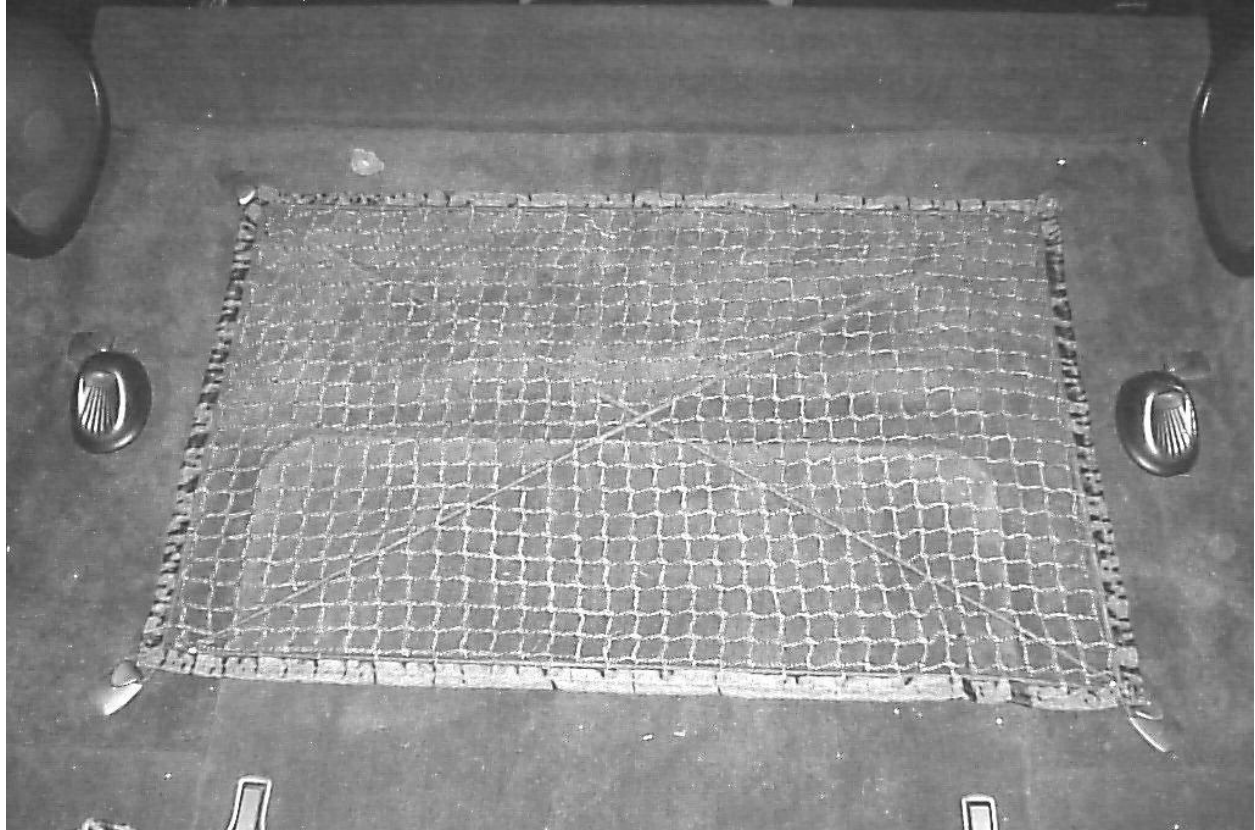


Photo B: (plastic hook provided for VetteCargoNets™ attach points) Keep steel pins aligned parallel to each other and not bent or crooked before inserting into carpet.

