

VetteCargoNets™ C6 Floor Net (Part # C6FL01)

Photo A: (C6 Floor Net Attachment Locations (four))

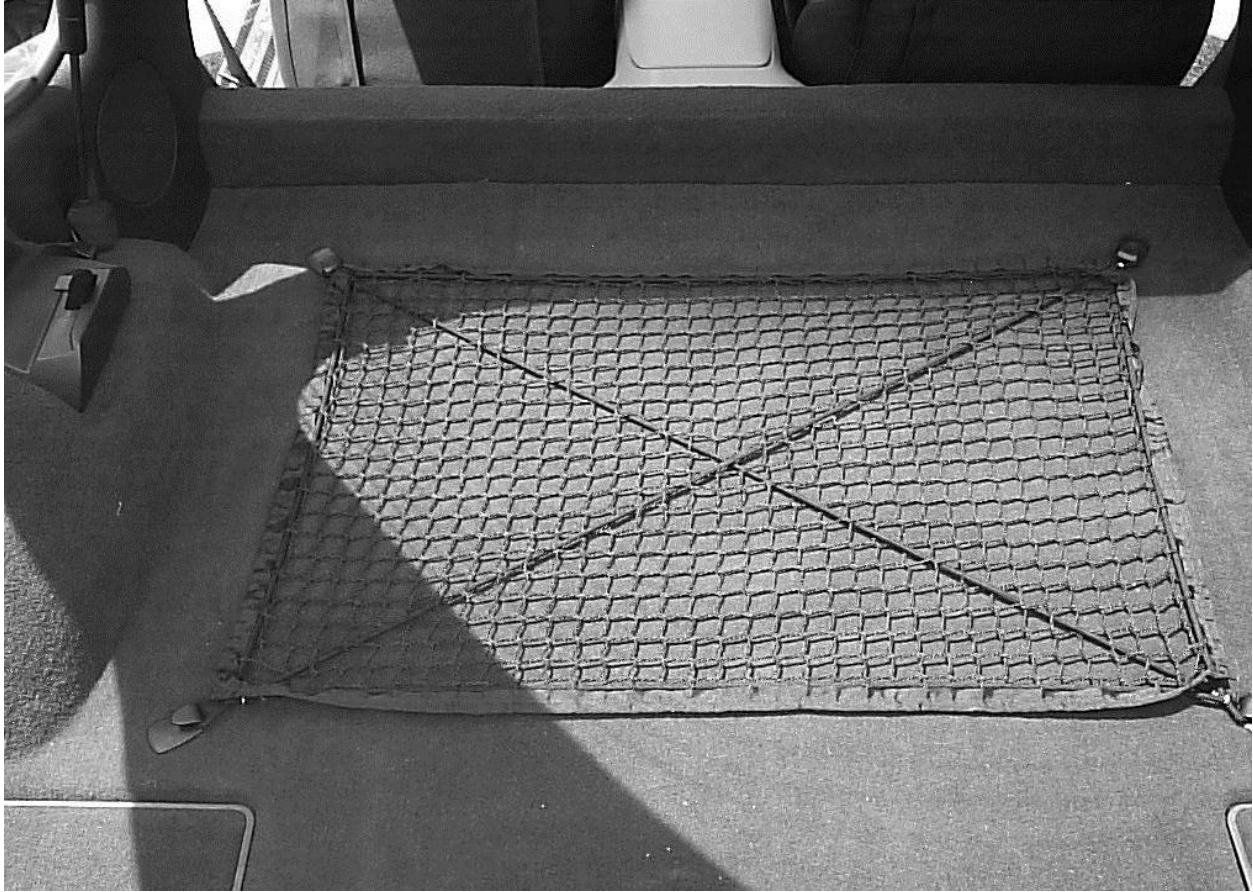


Photo B: (plastic hook provided for VetteCargoNets™ attach points) Keep steel pins aligned parallel to each other and not bent or crooked before inserting into carpet.

